




Montageanleitung
Bett Otto 120x200 Buche Natur
Bett Otto 140x200 Buche Natur

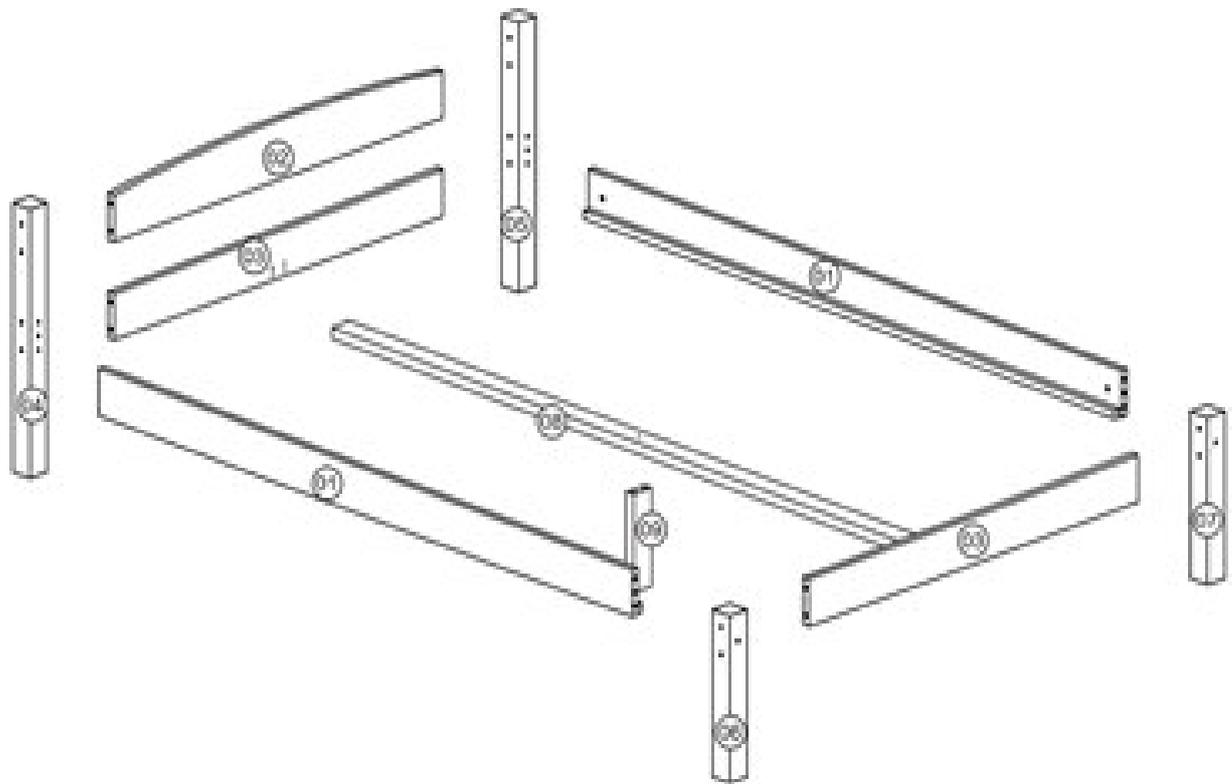

A X 16 <input type="checkbox"/>	B X 16 <input type="checkbox"/>	C X 10 <input type="checkbox"/>	D X 01 <input type="checkbox"/>
 M6 x 100 mm	 M10 x 14 mm	 Ø8,0 x 40 mm	 Sw4
E X 14 <input type="checkbox"/>	F X 02 <input type="checkbox"/>	G X 02 <input type="checkbox"/>	H X 01 <input type="checkbox"/>
 Ø3,5 x 16 mm			 Ø4,0 x 60 mm




01

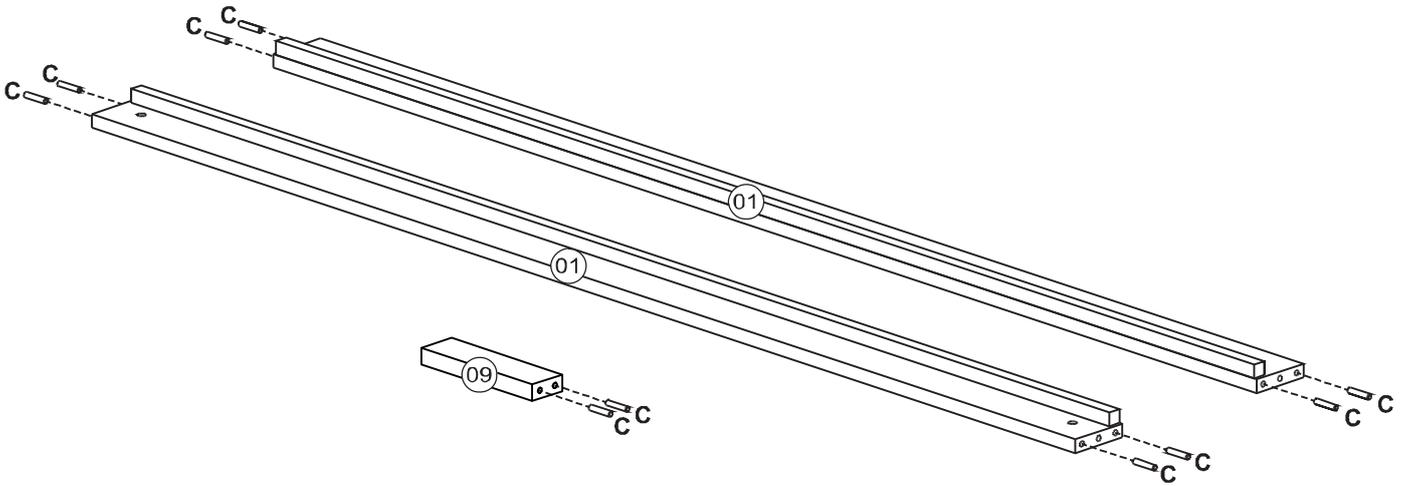


C  10x
Ø 8,0X40 mm

02

A  12x
M6X100 mm


B  12x
M10X14 mm

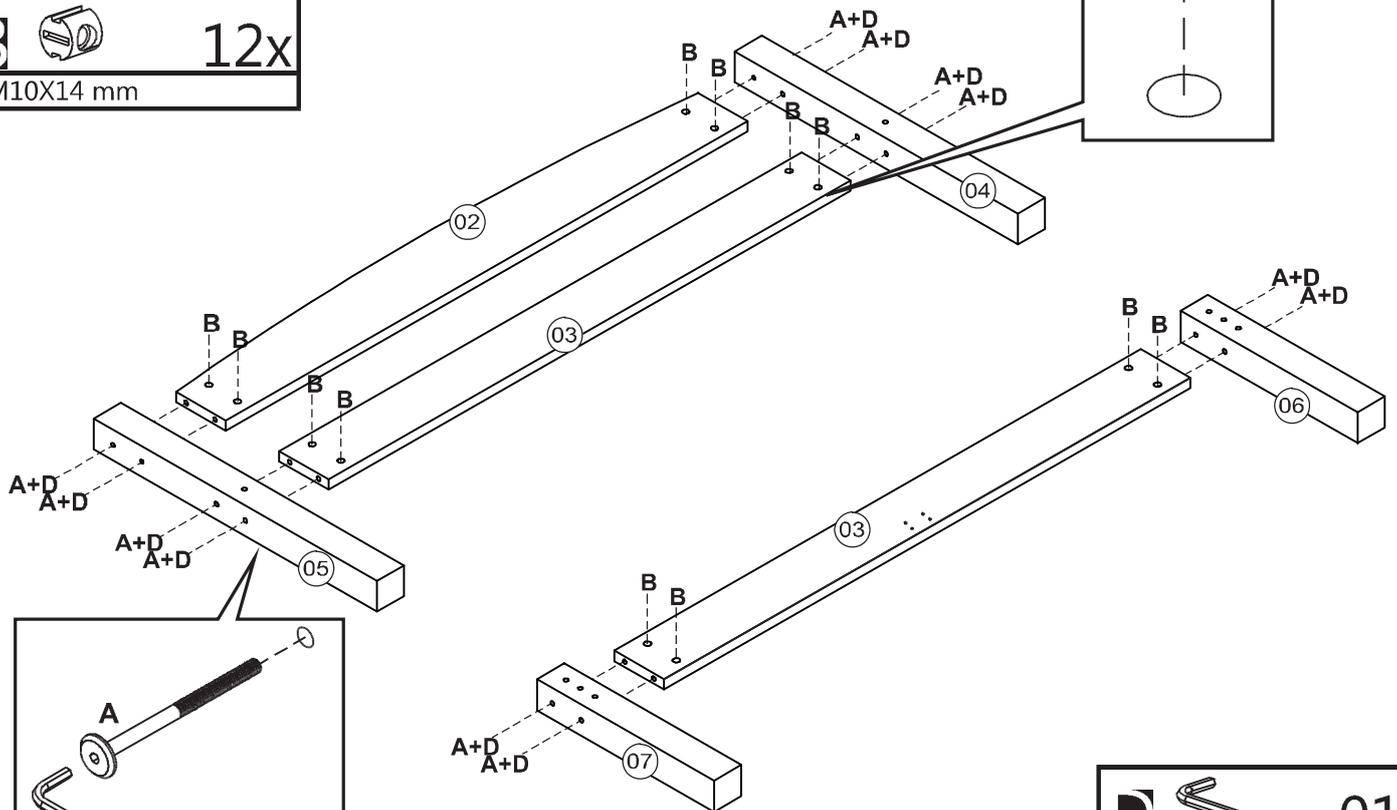

D  01x
Sw4


03

Sw4 01x


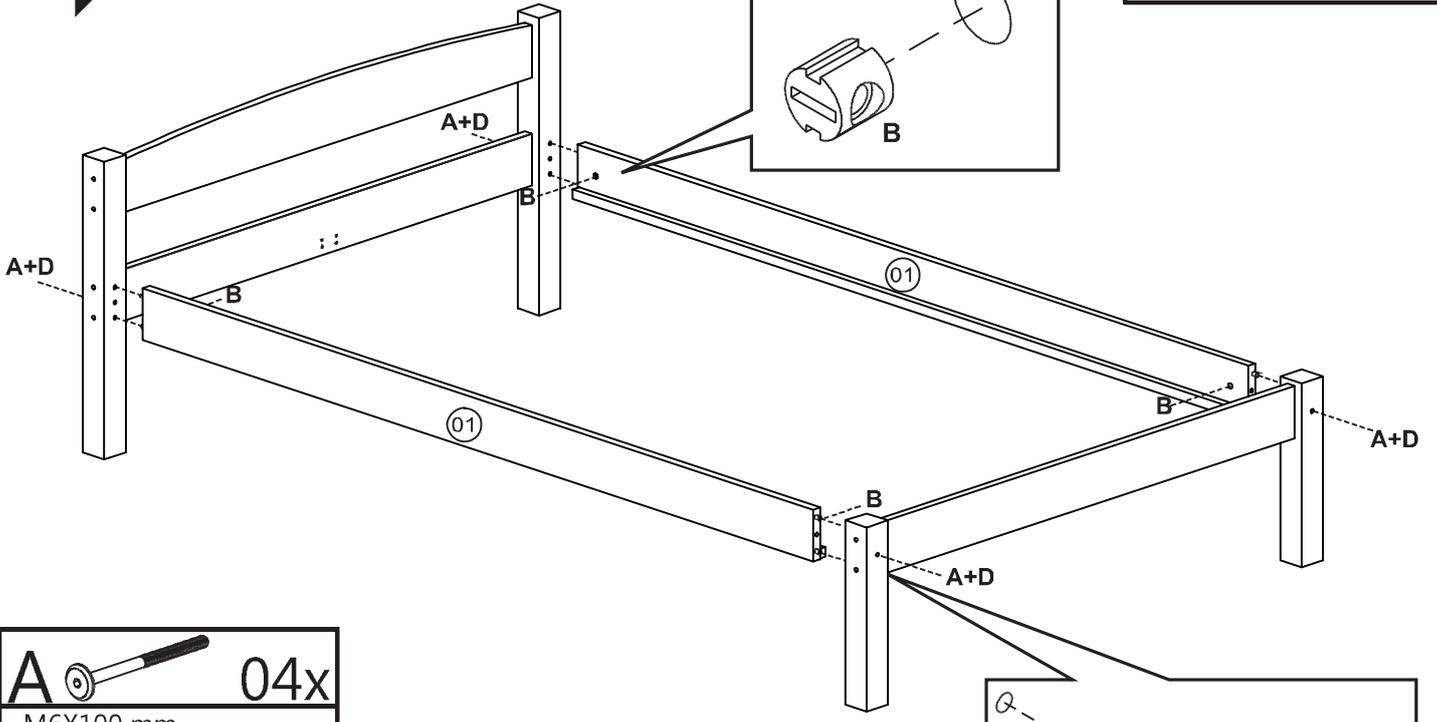


A 04x
M6X100 mm

B 04x
M10X14 mm

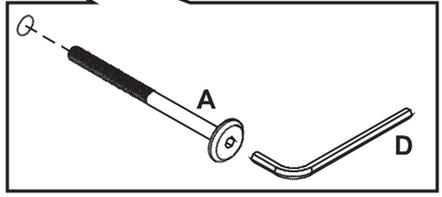


04

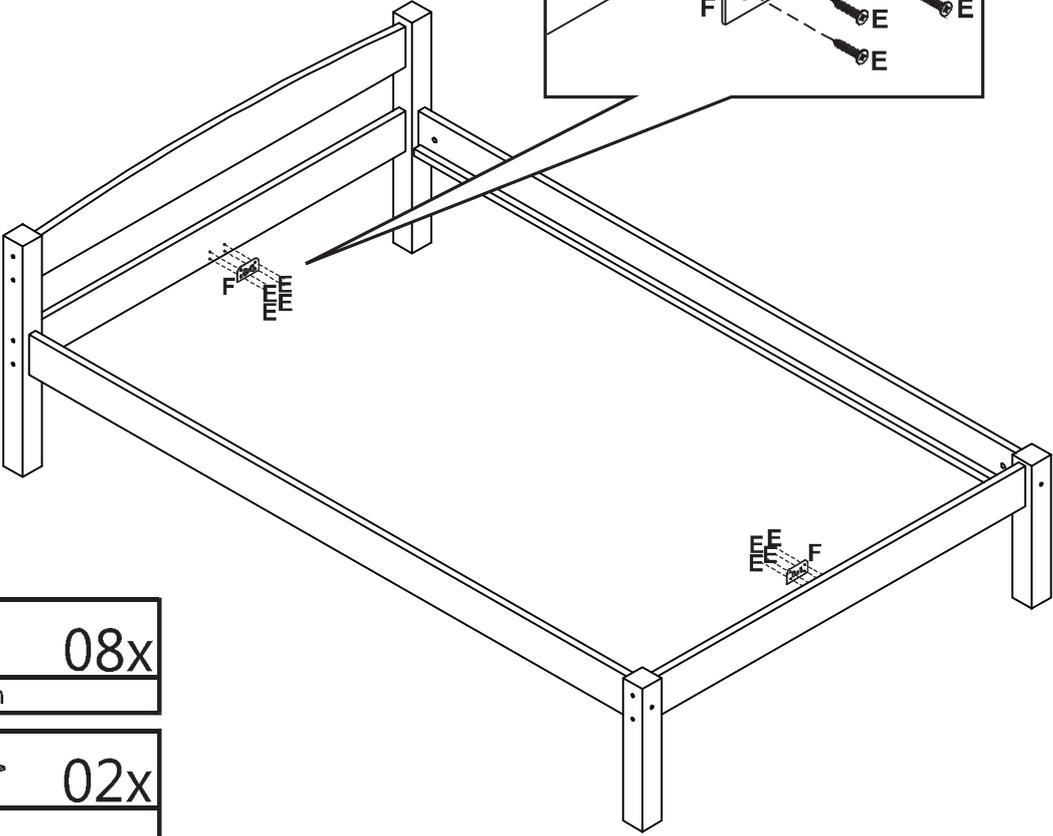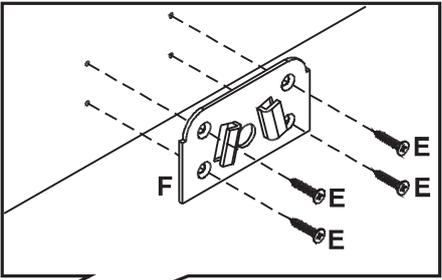

E 08x
Ø 3,5 x 16 mm

F 02x


05

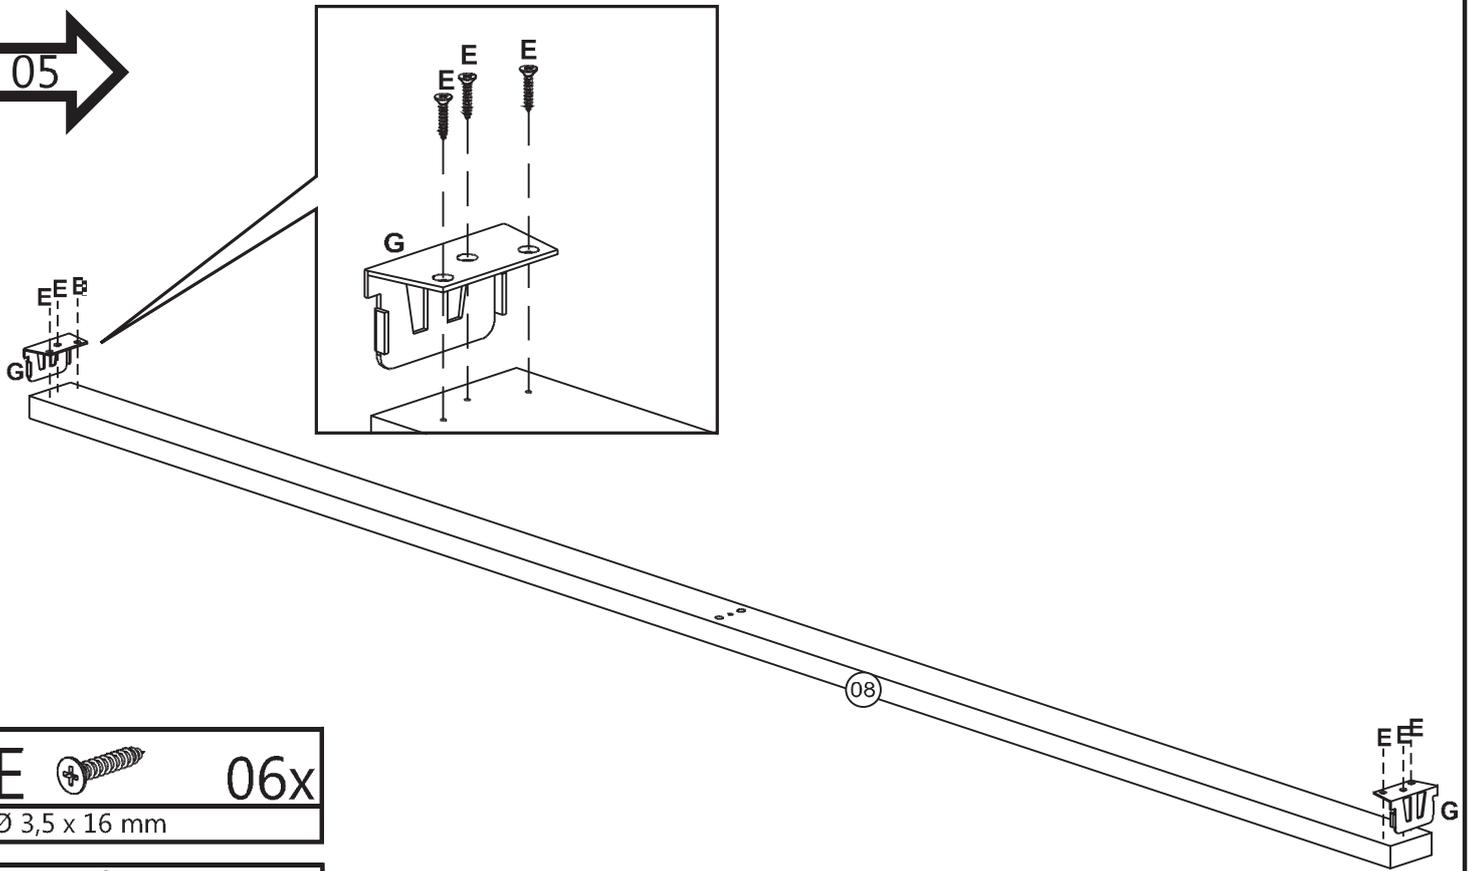

E  **06x**
Ø 3,5 x 16 mm

G  **02x**

06

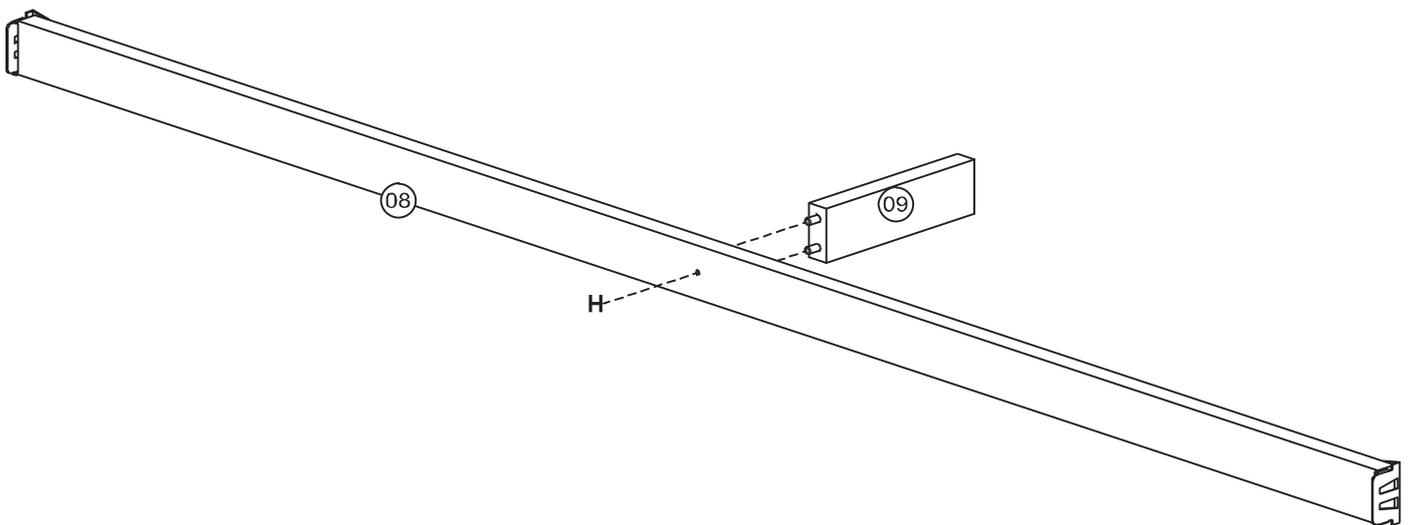

H  **01x**
Ø 4,0 x 60 mm

07

